



# REDRAGON MEMEANLION HONEYCOMB

Wired Gaming Mouse

Gaming Mouse Operating Instructions

## US UK

### Dear user

Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.


1

## OS support

Windows XP/Vista/Win7/Win8/Win10

### Button Instructions

1. Left mouse button.
2. Right mouse button.
3. Scroll wheel (clicked as middle mouse button).
4. Side key, defaulted function: Left Forward key on the keyboard.
5. Side key, defaulted function: Left Backward key on the keyboard.
6. DPI+ button (defaulted to speed up the cursor).
7. DPI- button (defaulted to slow down the cursor).

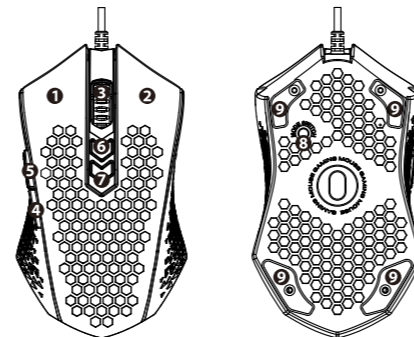

2

## Button Instructions

8. User mode toggle key: The mouse switches among the 5 user modes with each click.
9. Teflon foot pads: Large wear-resistant materials let the mouse move more smoothly.

### Lighting Instructions

DPI indicator light: The back light of the mouse varies with and shows the DPI value.

- Red ----- Gear 1 (500 DPI)
- Blue ----- Gear 2 (1000 DPI)
- Green ---- Gear 3 (2000 DPI)
- Purple --- Gear 4 (3000 DPI)
- Yellow --- Gear 5 (6200 DPI)

Lighting Effect (set via software): Breathing,Rainbow,Full Lighted,Wave, Flash,OFF.

### Software Instructions

You can change the following settings via the software associated.

1. Select the DPI value (500,1000,2000,4000,6200).
2. Select the polling rate. (125Hz, 250Hz, 500Hz).
3. Continuous keystroke function: Set the number of clicks and delay time.
4. Customize 7 mouse buttons.
5. Macros: Record up to 59 actions and trigger with one key.
6. Continuous keystroke function: Set the number of clicks and delay time.
7. Lighting: Adjust mouse lighting options.
8. Set 5 different user modes and switch between them with the button on the bottom of the mouse.

3

## FAQ

1. If the mouse does not respond, please check whether the mouse is plugged correctly in the corresponding computer USB port. You can try with another USB port.
2. If the cursor is moving slowly, jumping or intermittent, please try another surface. Surfaces that are dark, dirty, not flat, or bright may affect the performance of the mouse. A mouse pad is recommended.



4