



封面

封底

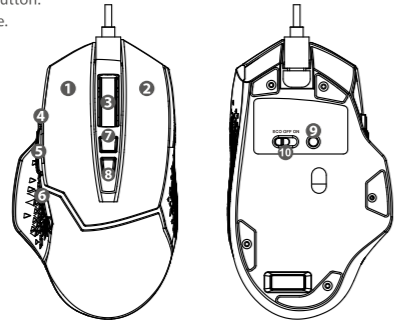

<p>US UK</p> <p>Dear user</p> <p>Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.</p> <ol style="list-style-type: none"> 1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. 2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty. 	<p>OS Support Windows XP/Vista/Win 7/Win 8/Win 10/Win 11</p> <p>Button Description</p> <ol style="list-style-type: none"> 1. Left mouse button. 2. Right mouse button. 3. Scroll wheel and middle button. 4. Fire button. 5. Forward button. 6. Backward button. 7. DPI+ button (defaulted to speed up the cursor). 8. DPI- button (defaulted to slow down the cursor). 9. Report rate button. 10. Power mode. 	<p>Basic Operation:</p> <p>How to Connect the Mouse with a Computer</p> <p>Wired Connection</p> <ol style="list-style-type: none"> 1. Take out the USB to USB C cable in the package and connect the mouse with your computer. 2. Slide the power switch on the bottom of the mouse to ON/ECO. 3. The computer will recognize and configure the mouse automatically. 4. The mouse will be ready for use when the configuration is finished. The LED of the LOGO and the lower edge will light on then if the power switch placed to ON. 5. The mouse is under recharging whatever the power switch is put to ON/ECO. The scroll wheel will light up if the power switch is put to ON. And it does not light up if the power switch is put to ECO. It may take about four hours for the mouse to be fully recharged. <p>2.4GHz Connection</p> <ol style="list-style-type: none"> 1. Take out the USB receiver in the package and plug it into any available USB port on your computer. 2. Slide the power switch on the bottom of the mouse to On or ECO. 3. The computer will recognize and configure the keyboard automatically. 4. The mouse will be ready for use when the configuration is finished. The LED of the LOGO and the lower edge will light on then if the power switch on the bottom of the mouse to ON. 5. The mouse can work about 8 hours with LED backlight be OFF, and about 2 hours with LED backlight be ON. The scroll wheel light will flash when battery is low. 6. Recharge the keyboard when the battery is low by Type C to USB A cable, in this way, it is in wired connecting mode. 	<p>5 DPI level with indicator, the LED is under the scroll wheel</p> <p>Press DPI+ and DPI- button can be switch mouse DPI level among 500(Red)/1000(Blue)/2000(Green)/3000(Purple)/8000(Yellow), defaulted as 1000 DPI</p> <p>The report rate setting</p> <p>There are 4 levels report rate can be switch by report rate button, the range is from 125Hz/250Hz/500 Hz /1000 Hz, The indicator LED under scroll wheel will be twinkle 1 time, 2 times, 3 times, 4 times for 125Hz/250Hz/500Hz/1000Hz.</p> <p>Auto Sleep and Smart Shutdown</p> <ol style="list-style-type: none"> 1. First level of auto sleep, the mouse LEDs are turn OFF when it is 1 minutes out of working, wake it up by press left+middle+right button, or just move the mouse to wake it up. 2. The second level of auto sleep, the mouse LEDs are turn off when it is eight minutes out of working, wake it up by press left+middle+right button, or just move the mouse to wake it up. <p>Low Battery Indication</p> <p>The scroll wheel light will flash in RED when battery is low.</p> <p>Backlight turn ON/OFF and switch the effects (Or set via software)</p> <ol style="list-style-type: none"> 1. Press Scroll wheel button +Forward button to turn ON/OFF the backlight. 2. Press Scroll wheel button +Backward button to switch the effects 	<p>Storage for the Nano USB Receiver</p> <p>The nano USB receiver can be stored in the storage slot on the bottom of the mouse.</p> <p>Software Instructions</p> <p>Please download the software on www.redragonzone.com for this mouse. You can get more functions and settings after software installation.</p> <ol style="list-style-type: none"> 1. The DPI value can be set from 250 to 8000 DPI. 2. Continuous keystroke function: Set the number of clicks and delay time. 3. Backlight mode of the LOGO: Steady ON/OFF. 4. Backlight mode of the side edge: Steady Breathing OFF. 5. 10 of the mouse buttons can be remapped to various actions. <p>How to Recharge the Battery</p> <p>When the battery is low, please recharge the battery in time.</p> <p>Take out the USB to USB C cable and connect the mouse and any USB power output port. While the battery is under recharging, the scroll wheel lights up and flash firstly in red (if the battery is very low), then in yellow and finally lights steadily on in green when the battery is fully recharged. Meanwhile the side edge light lights up and expands from back to front in red till the battery is fully recharged.</p> <p>The battery can be recharged for more than 300 cycle times. And you can use the mouse while it is under recharging.</p> <p>Note: Slide the power switch on the bottom of the mouse to OFF for long term storage.</p>	<p>How to Reconnect the Mouse the with the USB Receiver</p> <p>The mouse may lost connection with the USB receiver for some occasional reasons such as strong magnet, violent vibration. So you may need to reconnect the mouse with the USB receiver. In this case, unplug the receiver and plug it back again. Slide the power switch on the bottom of the mouse to ON or ECO, press and hold the Left+Middle+ Right button at the same time till the scroll wheel lights up and flash in yellow green. It will flash for about twenty seconds and then change back to the previous light effect. The reconnection will be completed and you can use the mouse then.</p> <p>FAQ</p> <ol style="list-style-type: none"> 1. If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computers USB port, or try another USB ports. 2. If the mouse is moving slowly, jumping or with delay, please try another surface. Dark, dirty, un-flat, bright surfaces may affect the performance of mouse. Mouse pad strongly recommended. 	<p>FCC Statement</p> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help <p>This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>California Proposition 65</p> <p>⚠ WARNING: Risk of Cancer from [Name of one or more chemicals known to cause cancer] And Reproductive Harm From [Name of one or more chemicals known to cause reproductive toxicity] Exposure - www.P65Warnings.ca.gov.</p>	<p>BATTERY SAFETY GUIDELINES</p> <p>DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material. DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition. DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations. DO NOT impact, bend, alter, disassemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.</p> <p>CAUTION</p> <p>Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.</p> <p>Cet appareil contient des émetteurs / récepteurs exempts de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.</p>
--	---	---	--	---	--	---	--

型号	红龙M690-PRO 2945	备注：尺寸：L100*W100mm 材质：80g书写纸，风琴折页，正反印 印刷：单色			
名称	说明书(英)				
日期	2023-1-31				
页码	1 OF 1	文件编号			
绘图	吴九香	审核	核准	版本	A.0

