 
 
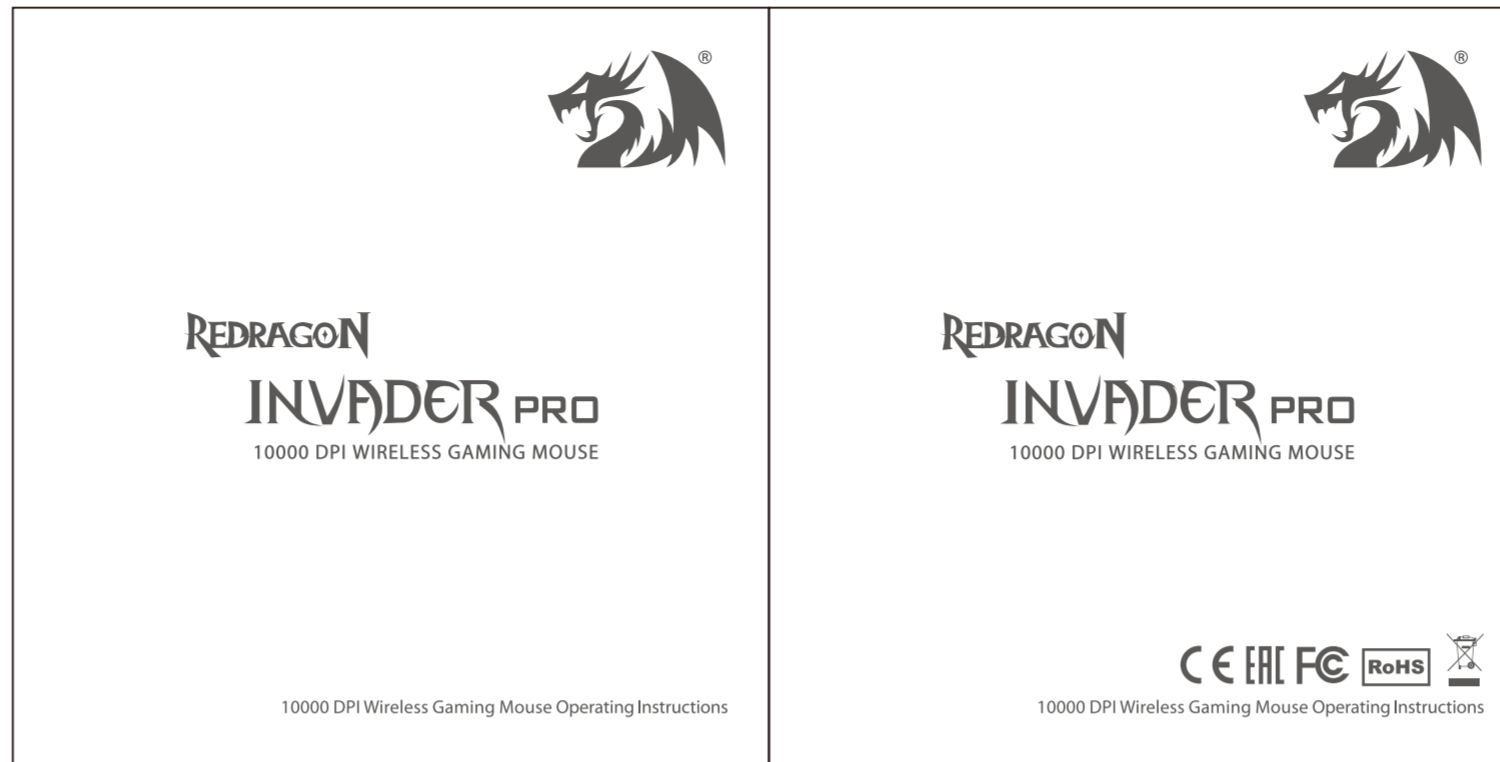



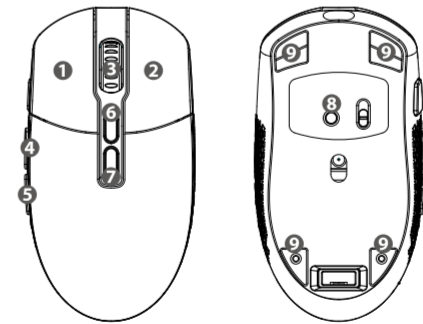

封面

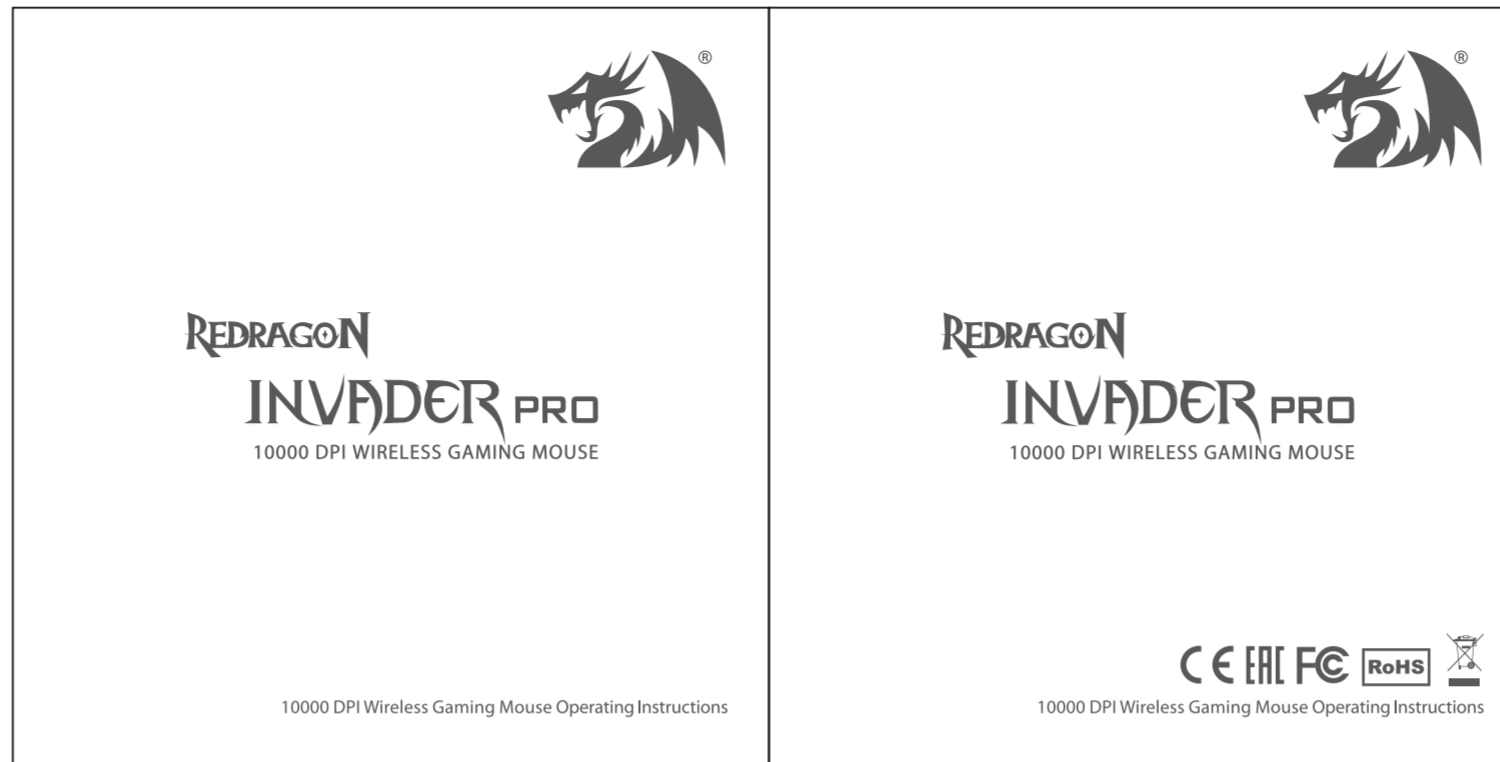

封底

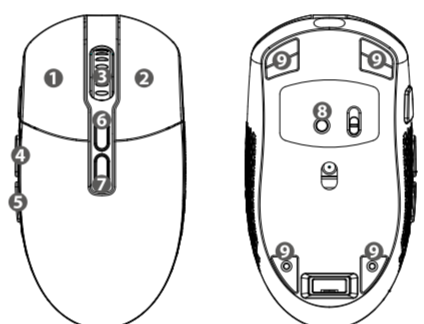

<p>US UK</p> <p>Dear user</p> <p>Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.</p> <ol style="list-style-type: none"> Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty. 	<p>Basic Operation:</p> <p>How to Connect the Mouse with a Computer</p> <ol style="list-style-type: none"> Take out the USB to USB C cable in the package and connect the mouse with your computer. Slide the power switch on the bottom of the mouse at any mode(ECO/OFF/ON). The mouse is under recharging whatever the mouse is at ECO or OFF or ON. The computer will recognize and configure the mouse automatically at wired mode. The mouse will be ready for use when the configuration is finished. <p>2.4G wireless pairing</p> <ol style="list-style-type: none"> Take out the USB receiver in the package and plug it into any available USB port on your computer, please note that the USB receiver can be storage on the bottom of mouse. Slide the power switch on the bottom of the mouse to 2.4G. The computer will recognize and configure the keyboard automatically. <p>Auto sleep and power save function</p> <p>The gaming mouse will be sleep mode if it is out of work in 8 minutes(at 1000HZ), please move the mouse or press any key to wake it up.</p>	<p>How to Recharge the Battery</p> <ol style="list-style-type: none"> The scroll wheel light will flash in Red when battery is low, you need to recharge the mouse now. Take out the USB to USB C cable and connect the mouse and any USB power output port. While the battery is under recharging, the scroll wheel lights up and flash firstly in red (if the battery is very low), then in yellow by 30%-90% charged and finally lights steadily on in Green when the battery is fully charged. Charging time is around 5 hours. Note: Slide the power switch on the bottom of the mouse to OFF for long term storage. <p>CAUTION: DO NOT CHARGE THE MOUSE BY WALL PLUG, INPUT VOLTAGE MAX 7V.</p> <p>Button Instructions</p> <ol style="list-style-type: none"> Left mouse button. Right mouse button. Scroll wheel (clicked as middle mouse button). Side key, defaulted function: Left Forward key on the keyboard. Side key, defaulted function: Left Backward key on the keyboard. DPI+ key. DPI- key. Mode switch key (switch the report rate between 125HZ and 1000HZ). 	<p>Button Instructions</p> <p>9. Teflon foot pads: Large wear-resistant materials let the mouse move more smoothly.</p>  <p>DPI adjustment and indication</p> <p>DPI indicator light: Behind the Scroll Wheel key, there is a DPI indicator light.</p> <p>Red ----- Gear 1 (500 DPI) Blue ----- Gear 2 (1000 DPI) Defaulted Green ----- Gear 3 (2000 DPI) Purple ----- Gear 4 (3000 DPI) Yellow ----- Gear 5 (10000 DPI)</p>	<p>Built-in Li-thion battery 1 unit.</p> <p>Report rate adjustment by press middle button+ backward button</p> <p>Report rate indicator light is under the Scroll Wheel key</p> <p>125HZ/ twinkle 1 time 250HZ/ twinkle 2 time 500HZ/ twinkle 3 time 1000HZ/ twinkle 4 time</p> <p>FAQ</p> <ol style="list-style-type: none"> If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computers USB port, or try another USB ports. If the mouse is moving slowly, jumping or with delay, please try another surface. Dark, dirty, un-flat, bright surfaces may affect the performance of mouse. Mouse pad strongly recommended. 	<p>FCC Statement</p> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help <p>This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.</p>
---	--	--	--	---	--

<p>BATTERY SAFETY GUIDELINES</p> <p>DO NOT replace the battery with a different model.</p> <p>DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.</p> <p>DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.</p> <p>DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.</p> <p>DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.</p> <p>DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.</p> <p>CAUTION</p> <p>Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.</p> <p>Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.</p> <p>This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.</p>	<p>PT</p> <p>Prezado usuário,</p> <p>Obrigado por escolher a marca REDRAGON. Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia.</p> <ol style="list-style-type: none"> Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos. Peças que sofrem desgaste (como pés) e a substituição de peças avulsas não estão incluídas em nossa garantia. 	<p>Operação básica:</p> <p>Como conectar o mouse a um computador</p> <ol style="list-style-type: none"> Retire o cabo USB para USB C da embalagem e conecte o mouse ao computador. Deslize a chave na parte inferior do mouse de todos os modelos (ECO/OFF/ON). O mouse passará a ser carregado independentemente de o mouse estar em ECO, OFF ou ON. O computador vai reconhecer e configurar o mouse automaticamente no modo com fio. O mouse estará pronto para uso quando a configuração estiver concluída. <p>Pareamento com 2.4G</p> <ol style="list-style-type: none"> Retire o receptor USB da embalagem e conecte em uma porta USB disponível no computador. Observe que o receptor USB pode estar armazenado na parte inferior do mouse. Deslize a chave na parte inferior do mouse para a posição 2.4G. O computador vai reconhecer e configurar o teclado automaticamente. <p>Função de desativação automática para economia de energia</p> <p>O mouse entrará no modo inativo se ficar sem uso por mais de 8 minutos (a 1000 HZ). Mova o mouse ou pressione qualquer tecla para reativá-lo.</p>	<p>Como recarregar a bateria</p> <ol style="list-style-type: none"> A iluminação da roda de rolagem piscará em vermelho quando a bateria estiver fraca, quando você deverá recarregar a bateria. Retire o cabo USB para USB C e conecte o mouse em qualquer porta USB. Enquanto a bateria estiver sendo recarregada, a roda de rolagem ficará acesa e piscará primeiro em vermelho (se a carga da bateria estiver muito baixa), depois em amarelo com 30% a 90% da carga e, finalmente, permanecerá acesa em verde quando a carga da bateria estiver completa. O tempo de carga é de cerca de 5 horas. Observação: Deslize o interruptor de energia na parte inferior do mouse estiver para a posição OFF (desligado) para armazenamento por longos períodos. <p>UIDADO: NÃO CARREGUE O MOUSE LIGANDO O PLUGUE NA TOMADA DA PAREDE. A TENSÃO MÁXIMA É DE 7 V.</p> <p>Instruções dos botões</p> <ol style="list-style-type: none"> Botão esquerdo do mouse. Botão direito do mouse. Botão da rodinha (clicado como botão do meio do mouse). Tecla lateral, função padrão: Tecla Avançar da esquerda no teclado. Tecla lateral, função padrão: Tecla de recuo da esquerda no teclado. Tecla DPI+. Tecla DPI-. Chave de troca de modo. 	<p>Instruções dos botões</p> <p>9. Pés de teflon: Grande e com material resistente, permitem o deslizamento mais suave do mouse.</p>  <p>Ajuste e indicação de DPI</p> <p>Indicador luminoso de DPI: Atrás da rodinha de rolamento há um indicador luminoso de DPI.</p> <p>Vermelho --- Opção 1 (500 DPI) Azul ----- Opção 2 (1000 DPI), padrão Verde ----- Opção 3 (2000 DPI) Roxo ----- Opção 4 (3000 DPI) Amarelo --- Opção 5 (10000 DPI)</p>	<p>Bateria de ion de lítio embutida, 1 unidade.</p> <p>Ajuste a velocidade de leitura pressionando o botão do meio e o botão para trás</p> <p>A luz indicadora da velocidade de leitura fica sob a tecla da roda de rolagem</p> <p>125 HZ/pisca uma vez 250 HZ/pisca duas vezes 500HZ/pisca três vezes 1000HZ/pisca quatro vezes</p> <p>Dúvidas frequentes</p> <ol style="list-style-type: none"> Se o mouse não estiver respondendo, verifique se o mouse está conectado corretamente na porta USB correspondente do computador ou experimente usar outra porta USB. Se o cursor estiver se movendo lentamente, saltando ou com movimentos intermitentes, experimente outra superfície. Superfícies escuras, sujas, irregulares ou brilhantes podem afetar o desempenho do mouse. É recomendado o uso de um mouse pad. 
---	---	--	--	---	---

型号	红龙M719RGB-PRO 2939	备注:	尺寸: L100*W100mm
名称	说明书(英+巴西)		材质: 80g书写纸, 风琴折页, 正反印
日期	2024-1-16		印刷: 单色
页码	1 OF 1	文件编号	
绘图	吴九香	审核	
		核准	
		版本	A.0