

Important! Please read the information carefully before you use the

K530 firmware:

1. For BT wireless issues, due to the keyboard's own IC mechanism, please try these two firmwares in turn to fix the wireless connection issues.


2. For other keyboard issues, please be sure to identify whether you are using a new or old version of K530.

New version: (N-key rollover in wireless mode)

Old version: (6 keys rollover in wireless mode)

How to identify my keyboard is new or old version?

Use third-party plugins or websites which are able to do keyboard clicks records or testing.

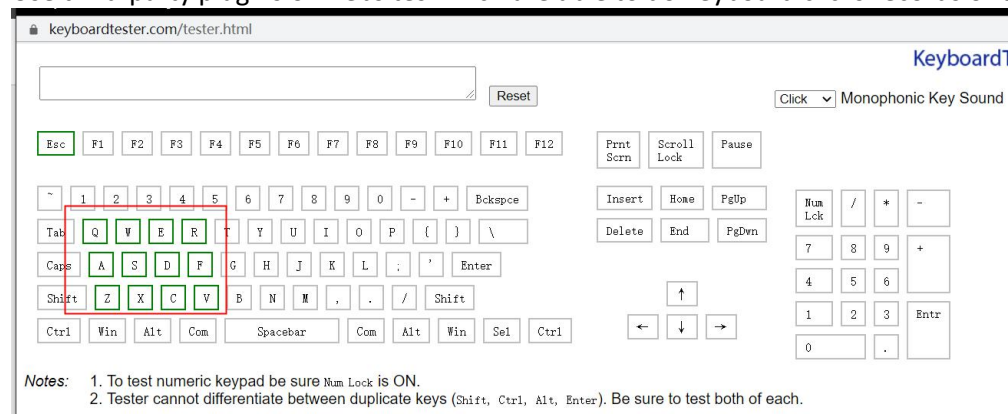

Press at least **6 keys** at the same time **in wireless mode**.

New version: the virtual keyboard shows **all the keys**

Old version: the virtual keyboard shows **only 6 keys**

3. Run the correct firmware in wired mode.



If you have any questions about this keyboard, please feel free to

contact us via <support@redragonshop.com>. We will always reply to

you within 24 hours.

Q1: Unable to connect K530 to device(BT4.0 and above) in BT1 mode.

A1: Make sure the switch of BT1 is on with red flashing light, long press FN2 + ESC till the backlit of the keyboard twinkle one time quickly. Then you will be able to find "Dracomik-1" in your Bluetooth device list, click it and to pair.

Q2: How to do keybinding or macro without software?

A2: Yes, 6 keys (G1-G6) can be macro on-board (64 keys at maximum). For example, set 000 on G1: press FN2 + 7(Rec) → press FN2 + G1 → press 000 → press FN2 + 7(Rec) to store the keybinding and quit macro mode.

Q3: Why the backlit of the CapsLK is off?

A3: In wireless/wired mode, CapsLK will be red backlit only in capitalization mode triggered. But the backlit will always remain off when in connection with mobile devices like cellphones and tablets.

Q4: How to use it in wired mode?

A4: Plug USB-C cable stably to your device with keyboard BT switch OFF. Try another USB-C cable if the keyboard is failed to connect with your device and contact us.

Q5: How MAGIC FN key (CapsLK) works?

A5: MAGIC FN key can only be used and programmed with software to FN1 or FN2. For example, set macro FN1 on MAGIC FN key to use ←↑→↓ keys by one hand with pressing CapsLK + WASD.